



VELOCITYONE™ FLIGHTDECK

QUICK FLIGHT GUIDE

BOX CONTENTS



x2



x6

WARRANTY INFORMATION

For warranty information and service, please visit www.turtlebeach.com/international-distributors.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

To make a warranty claim in Australia during the Warranty Period, Purchaser should contact the VB repair centre:

Tecworks International Pty Ltd, 13 Distribution Place, Seven Hills NSW 2147, Tel: 1300 074 512

TBS-0724-05-QT6-C

SUGGESTED BUTTON MAPPINGS

THROTTLE


STICK

1	LEFT MOUSE BUTTON	12	ATC MENU
2	RIGHT MOUSE BUTTON	13	NAV LOG
3	AILERONS / ROLL	14	LIGHTS ON / OFF
4	RUDDER / YAW / NOSE WHEEL	15	CHECKLIST
5	ENGINE 1 THRUST	16	ENGAGE STARTER MOTOR
6	ENGINE 2 THRUST	17	SCREENSHOT
7	AUTOPILOT ALTITUDE	18	ELECTRICS ON
8	AUTOPILOT ALTITUDE	19	ELECTRICS OFF
9	AUTOPILOT ALTITUDE	20	PARKING BRAKE ON
10	AUTOPILOT ALTITUDE	21	PARKING BRAKE OFF
11	RIGHT MOUSE BUTTON	22	AUTO START
12	LEFT MOUSE BUTTON	23	LANDING GEAR RETRACT
13	AILERONS / ROLL	24	LANDING GEAR EXTEND
14	RUDDER / YAW / NOSE WHEEL	25	PARKING BRAKE ON
15	ENGINE 1 THRUST	26	PARKING BRAKE OFF
16	ENGINE 2 THRUST	27	PUSHBACK
17	AUTOPILOT ALTITUDE	28	ARM MISSILE
18	AUTOPILOT ALTITUDE	29	ELEVATOR TRIM NOSE DOWN
19	AUTOPILOT ALTITUDE	30	ELEVATOR TRIM NOSE UP
20	AUTOPILOT ALTITUDE	31	INTERNAL / EXTERNAL VIEW
21	AUTOPILOT ALTITUDE	32	PAUSE SIM / MENU
22	AUTOPILOT ALTITUDE	33	SLEW MODE
23	AUTOPILOT ALTITUDE		
24	AUTOPILOT ALTITUDE		
25	AUTOPILOT ALTITUDE		
26	AUTOPILOT ALTITUDE		
27	AUTOPILOT ALTITUDE		
28	AUTOPILOT ALTITUDE		
29	AUTOPILOT ALTITUDE		
30	AUTOPILOT ALTITUDE		
31	AUTOPILOT ALTITUDE		
32	AUTOPILOT ALTITUDE		
33	AUTOPILOT ALTITUDE		

GETTING STARTED



ATTACH THE STICK TO THE BASE. ROTATE THE COLLAR ON THE BASE COUNTER CLOCKWISE TO SECURE

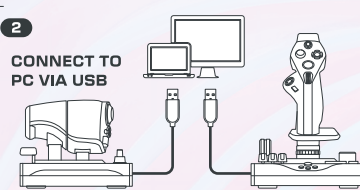


CONNECT TO PC VIA USB



DOWNLOAD 'TURTLE BEACH FLIGHT HANGAR' DESKTOP APP FROM THE MICROSOFT STORE TO CUSTOMIZE YOUR FLIGHTDECK



- 1 HAT
- 1 PHYSICAL BUTTON
- 1 VIRTUAL BUTTON
- A AXIS
- 1 TOUCH INPUT

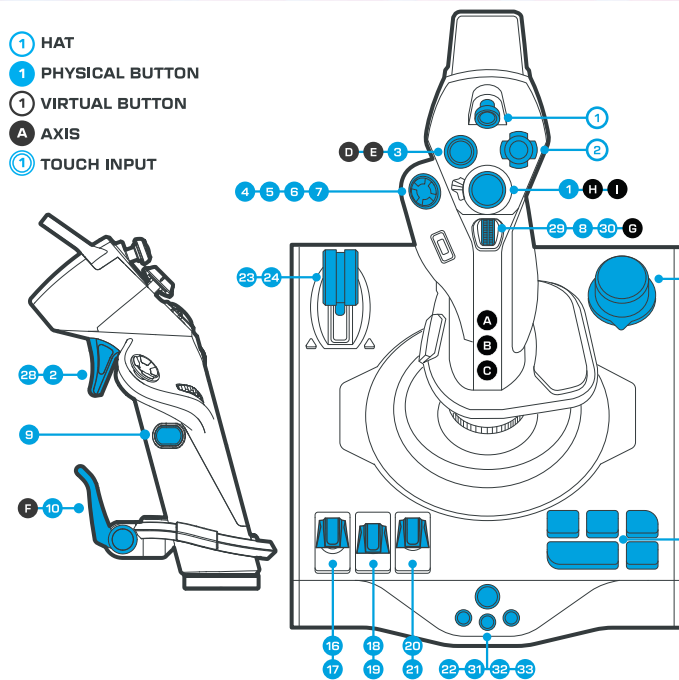

- 1 8-WAY HAT SWITCH
- 2 8-WAY HAT SWITCH
- A X AXIS
- B Y AXIS
- C Z AXIS
- D POV L/R AXIS (Rx)
- E POV U/D AXIS (Ry)
- F PADDLE AXIS (Rz)
- G THUMB WHEEL AXIS (SLIDER)
- H MOUSE X AXIS
- I MOUSE Y AXIS
- 1 PUSH BUTTON / MOUSE LB
- 2 2nd STAGE TRIGGER / MOUSE RB
- 3 ANALOGUE POV CLICK
- 4 D-PAD EAST
- 5 D-PAD SOUTH
- 6 D-PAD WEST
- 7 D-PAD NORTH
- 8 THUMB WHEEL CLICK
- 9 SHAFT BUTTON
- 10 PINKIE LEVER
- 11 BUTTON 11
- 12 BUTTON 12
- 13 BUTTON 13
- 14 BUTTON 14
- 15 BUTTON 15
- 16 BUTTON 16 FORWARD
- 17 BUTTON 17 BACK
- 18 BUTTON 18 FORWARD
- 19 BUTTON 19 BACK
- 20 BUTTON 20 FORWARD
- 21 BUTTON 21 BACK
- 22 BUTTON 22
- 23 GEAR LEVER FORWARD
- 24 GEAR LEVER BACKWARD
- 25 ROTARY KNOB LEFT
- 26 ROTARY KNOB RIGHT
- 27 ROTARY KNOB DOWN
- 28 TRIGGER STAGE 1
- 29 STICK THUMB WHEEL UP
- 30 STICK THUMB WHEEL DOWN
- 31 BUTTON 31
- 32 BUTTON 32
- 33 BUTTON 33

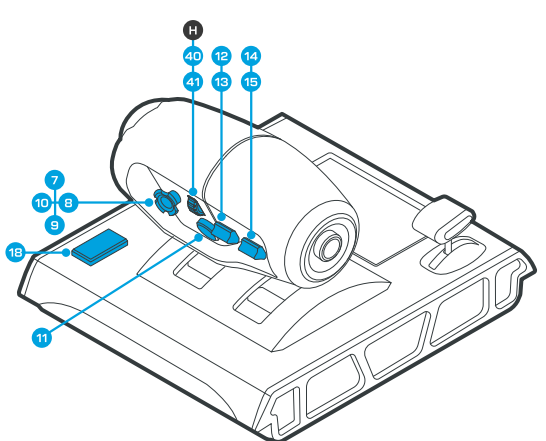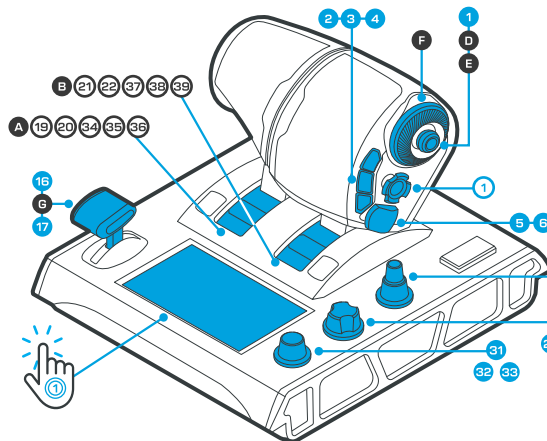

- 1 8-WAY HAT SWITCH
- A LEFT THROTTLE FORWARD/BACK
- B RIGHT THROTTLE FORWARD/BACK
- C ALT KNOB (OUTER DIAL)
- D ANALOGUE POV 1 LEFT/RIGHT
- E ANALOGUE POV 1 UP/DOWN
- F THROTTLE THUMB WHEEL
- G FLAP LEVER UP/DOWN
- H THROTTLE FINGER WHEEL
- 1 ANALOGUE POV CLICK
- 2 BUTTON 2
- 3 BUTTON 3
- 4 BUTTON 4
- 5 BUTTON 5 BACKWARD
- 6 BUTTON 6 FORWARD
- 7 BUTTON 7 NORTH
- 8 BUTTON 8 EAST
- 9 BUTTON 9 SOUTH
- 10 BUTTON 10 WEST
- 11 BUTTON 11
- 12 BUTTON 12 UP
- 13 BUTTON 13 DOWN
- 14 BUTTON 14 UP
- 15 BUTTON 15 DOWN
- 16 BUTTON 16 FORWARD
- 17 BUTTON 17 BACK
- 18 BUTTON 18
- 19 BUTTON 19 MAX. VIRTUAL DETENT
- 20 BUTTON 20 MIN. VIRTUAL DETENT
- 21 BUTTON 21 MAX. VIRTUAL DETENT
- 22 BUTTON 22 MIN. VIRTUAL DETENT
- 23 BUTTON 23 ALT
- 24 BUTTON 24 UPPER, OUTER, LEFT
- 25 BUTTON 25 UPPER, OUTER, RIGHT
- 26 BUTTON 26 UPPER, INNER, LEFT
- 27 BUTTON 27 UPPER, INNER, RIGHT
- 28 BUTTON 28 HDG, PRESS
- 29 BUTTON 29 MID, LEFT
- 30 BUTTON 30 MID, RIGHT
- 31 BUTTON 31 SPD, PRESS
- 32 BUTTON 32 LOWER, LEFT
- 33 BUTTON 33 LOWER, RIGHT
- 34 BUTTON 34 FORWARD VIRTUAL DETENT
- 35 BUTTON 35 MIDDLE VIRTUAL DETENT
- 36 BUTTON 36 BACK VIRTUAL DETENT
- 37 BUTTON 37 FORWARD VIRTUAL DETENT
- 38 BUTTON 38 MIDDLE VIRTUAL DETENT
- 39 BUTTON 39 BACK VIRTUAL DETENT
- 40 BUTTON 40 WHEEL UP
- 41 BUTTON 41 WHEEL DOWN
- 1 FLIGHT TOUCH DISPLAY



NEED TO KNOW MORE?
SCAN THE QR CODE FOR DETAILED PRODUCT INFORMATION AND SUPPORT
VOUS SOUHAITEZ EN SAVOIR PLUS?
SCANNEZ LE CODE QR POUR ACCÉDER AU MANUEL COMPLET DU PRODUIT
ET À UNE ASSISTANCE SUPPLÉMENTAIRE.



/r/TurtleBeachSimulation/
/TurtleBeachSimulation
/JMGjPcqMEj